



AURELIA® 201

13gg Black Polyester Glove with a Black PU Coating

S/7 M/8 L/9 XL/10 XXL/11
201-7 201-8 201-9 201-10 201-11

Instructions for use, in accordance with Regulation EU 2016/425 on PPE

WARNING

No protection offered against liquids or chemicals. Do not use these gloves to protect against serrated edges or blades or naked flames. These gloves shall not be worn when there is a risk of entanglement by moving parts or machines. Always confirm that products are in conformance with standards, tested and to the level that is in accordance with your requirements. This Model does not contain any substances at levels that are known to, or suspected to, adversely affect user hygiene or health. The protection against risks or hazards which are not mentioned in this document is not warranted. The levels of performance mentioned are only valid for new gloves, not washed or regenerated. These levels of performance are obtained from tests done according to conditions defined by the applicable standards. This glove shall not be in contact with fire. Before use, the glove shall be visually controlled, in case of deterioration the gloves must be scrapped (abrasion, cut, tear and so on). For gloves with different layers of material, the performance levels are warranted only for the whole glove. For gloves with two or more layers the overall classification does not necessarily reflect the performance of the outermost layer. PPE subject to aging - The design performance can not be significantly affected by aging when stored in appropriate conditions.

DESCRIPTION OF USE

These gloves are employed and intended to protect against mechanical risks of abrasion, blade, cut, tear, puncture of palm in working environment. The gloves meet the requirement for resistance to puncture, may not be suitable for protection against sharply pointed objects such as hypodermic needles.

DISPOSAL INSTRUCTIONS

At the end of life, used gloves maybe contaminated with hazardous substances, dispose of according to the Local Authority Regulations, landfill or incinerate under controlled conditions.

Donning (Putting on): Wash and dry your hands completely before use. Always inspect the gloves internally and externally for any defects or imperfections. Ensure the gloves fit well.

Doffing (Removing): Avoid touching contaminated or cold gloves. Place the fingertips into the palm of the other glove. Pull the glove until almost off. Repeat on the other hand. With both gloves almost off shake both hands to remove the gloves fully.

CARE INSTRUCTIONS

Storage and Cleaning:

After use, clean the gloves thoroughly with a dry cloth to remove any contaminants. If the gloves are to be re-worn store in such a way that the inside lining can dry out easily. These gloves cannot be washed.

Store the gloves in their original packaging in a cool and dry place. Keep away from direct sunlight, heat, flame and sources of Ozone. Glove life time in use is based on wear and abrasion.



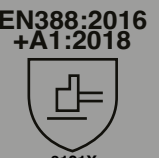
AURELIA® 201

13gg Black Polyester Glove with a Black PU Coating



CE certificate issued by:
NB 0598 SGS Fimko Oy, Takomotie 8, FI-00380 Helsinki, Finland

Product is in conformity with Regulation EU 2016/425 on PPE, Category II Dexterity Level 5

Testing Requirement	Description	Test Result	Explanation of Test and Level
 EN388:2016 +A1:2018 3121X	General Requirements	Pass	Risk Category, Labelling
	Mechanical Hazards	4	Abrasion Resistance: Level 0-4
		1	Coupe Test, Blade Cut Resistance: Level 0-5
		2	Tear Resistance: Level 0-4
		1	Puncture Resistance: Level 0-4
	X		TDM Cut Resistance, ISO 13997: Level A-F
			'X' Not Tested

AVAILABLE SIZES AND SELECTION: Fit according to hand size. Allowance built in for comfort. Check fit before using in working conditions. Unit: MM - The size of these products is marked on the glove. All sizes comply with the EN ISO 21420:2020 for comfort, fit and dexterity.

Glove Size	Hand Length	Hand Circumference
S / 7	160	188
M / 8	166	196
L / 9	172	208
XL / 10	179	210
XXL / 11	186	210



Manufactured in China on behalf of:
UK & Europe HQ
Supermax Healthcare Limited
Units 12-16 Titan Drive,
Fengate, Peterborough,
PE1 5XN

+441733 615215
sales@supermax.co.uk
www.aureliagloves.co.uk



Europe
Supermax Healthcare (Europe Limited)
Units 1001-1012
Building 1000, Gateway Business Park,
New Mallow Road Cork, Ireland

+353 15256724
sales@supermax.ie
www.aureliagloves.ie

